



PT. SMART CAKRAWALA AVIATION

WORK ORDER

Form: SCA/MTC/030

Subject :	No.	WO/004-SNB/XI/2021
Inspection 100 Hours / Annual Due at 300 FH.	Date	15-Nov-2021
	A/C Reg.	PK-SNB MSN 1015
Reference :	Prepared By	TS
MP PILATUS PC-6 Rev. 0	Checked By	CI
	Approved By	TM

To : Engineer In Charge

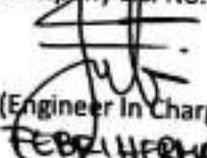
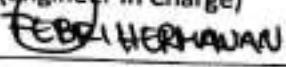
Description :

1. Perform Inspection 100 Hours / Annual Due at 300 FH.
2. Make an entry in Maintenance Log.
3. Return the Completed Work Order and Form to PPC.

#If any finding, please close the routine card, and transferred to inspection card.

Additional Work :

- Nil -

Compliance Statement	Sign & Date Company Lic. No.: 6445/SCA-009  (Engineer In Charge)  	Signature (Technical Manager)
----------------------	--	----------------------------------

AIRCRAFT CHECK WORK SUMMARY

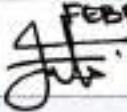
(Form: SCA/MTC/051)

DATE OF ISSUED	JO/WO #	TYPE OF MAINTENANCE	DATE OF ACCOMPLISHED
15-Nov-2021	WO/004-SNB/XI/2021	Inspection 100 Hrs / Annual	29 NOV 2021
A/C Type		Mfg. Serial Number	A/C Registration
PILATUS PORTER PC-6		1015	PK-SNB
AIRCRAFT DATA			
Subject	Pos #	Serial Number (SN)	TTSN/TCSN
Engine	#1	PCE-PG0565	306:46307:48 / 304 331
	#2	-	
Propeller/Rotor	#1	FY4513	306:46307:48 / 304 331
	#2	-	
Landing Gear	NLG		306:46307:48 / 329 331
	LH MLG		306:46307:48 / 329 331
	RH MLG		306:46307:48 / 329 331

PACKAGE COVERED

No	Subject	Qty	Remark
1	Non-Routine Card	-	
2	Inspection Card	-	
3	Work Order	1	
4	Summary Inspection List	1	
5	Material and Tool List	-	
6	Escalation form	-	
7	CRS (SMI / Unscheduled Maintenance)	1	

INSPECTION CARD (IC) LIST (Finding during maintenance)

No	Taskcard Ref	Subject	Status		Name/ Sign & Stamp
			Open	Close	
IC-001	APPENDIX-100.HRS	IGNITER WAS EJECTION 2EA. OUT OF LIMITS->		✓	 FEB 14 2021 09 John Doe
IC-002					
IC-003					
IC-004					
IC-005					
IC-006					

<u>IC-007</u>				
<u>IC-008</u>				
<u>IC-009</u>				
<u>IC-010</u>				
<u>IC-011</u>				
<u>IC-012</u>				
<u>IC-013</u>				
<u>IC-014</u>				
<u>IC-015</u>				

Prepared by :
Technical Support

Checked by :
Chief Maintenance

Verified by :
Chief Inspector

Approved by :
Technical Manager



SUMMARY INSPECTION ITEMS
(Form: SCA/MTC/050)

WO Ref: WO/004-SNB/XI/2021

NO.	TASK CARD NO.	DESCRIPTION	DATE	EST MHR	NAME	STAMP
1	APPENDIX	ENGINE GROUND RUN CHECK SHEET	29/2021 NOV		FEBRI HERMAWAN	SMART AVIATION 09
2	APPENDIX	100 HOURS / ANNUAL INSPECTION	29/2021 NOV		FEBRI HERMAWAN	SMART AVIATION 09
3	APPENDIX	FUEL DISTRIBUTION SYSTEM – ADJUSTMENT TEST	28/11-2021	2 MHR	BRANDO OMY TRIANTO	SMART AVIATION 16
4	APPENDIX	FUEL INDICATING SYSTEM – ADJUSTMENT	28/11-2021	3 MHR	BRANDO OMY TRIANTO	SMART AVIATION 16
5	APPENDIX	FUEL SYSTEM UNDERWING TANK INSPECTION TRANSFER PUMP FILTERS	28/2021 NOV		FEBRI HERMAWAN	SMART AVIATION 09
6	APPENDIX	WHEEL AND BRAKES INSPECTION	27/2021 NOV		FEBRI HERMAWAN	SMART AVIATION 09
7	APPENDIX	MAIN WHEEL INSPECTION	N/A		N/A	SMART AVIATION 09
8	NRC-001	EMERGENCY WINDOWS- LUBRICATION	29/2021 NOV		FEBRI HERMAWAN	SMART AVIATION 09
9	SCA/MTC/023	EMERGENCY EQUIPMENT CHECK	28/2021 NOV		FEBRI HERMAWAN	SMART AVIATION 09



PT. SMART CAKRAWALA AVIATION

**CERTIFICATE RETURN TO SERVICE
SCHEDULED MAINTENANCE INSPECTION
(CRS-SMI)**

A/C TYPE	: PILATUS PORTER PC-6	TTSN	306 : 46
A/C REG	: PK-SNB	TCSN	304 : 48
MSN	: 1015	DATE	27 NOV 2021

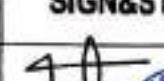
TYPE OF INSPECTION : INSPECTION 100 HOURS / ANNUAL
DUE AT : 300 HOURS
REF : MP PILATUS PC-6 REV. 0

EXCEPTION

۱۱۱

AUTHORIZED PERSON

I hereby certify that this aircraft has been maintained accordance with CASR and Maintenance Program.
Aircraft safe and airworthy for flight

NAME	CAT	AMEL/OTR NO	SIGN&STAMP	DATE
FEBRI HERMANAN.	AIRFRAME & POWER PLANT	G 445 STA .009	 	29 / 2021.
	EIRA			NOV'

THE NEXT DUE TYPE OF INSPECTION : 100 hrs IN 82

DUE AT : 400 HRS.

Form: SCA/MTC/049



WORK ORDER NO.		: PK-SNB / WO/004-SNB/X1/2021 .	
Aircraft Registration	PK-SNB	Aircraft Total Hours	307-48 306:46
Aircraft Serial No.	1015	Aircraft Total Landings	329 331
Engine Serial No.	PCE-PG0565	Engine TSN / TSO	307-48 306:46
Propeller Serial No	FY 4513	Propeller TSN / TSO	307-48 306:46
Ambient Temp	29 °C	FBP (Field Barometric Pressure)	29.92 In.Hg
Date	29-Nov-2021	Time	07:50 UTC.
Mechanic / Engineer	FERDI HERMANN	Authorized Engineer	BRAMONI.ONY
Reason For Ground Run	AFTER MAINTENANCE .		

Checks to be carried out. No:	1	2	4	5	7	8	9	10	11	12	13	14	15
-------------------------------	---	---	---	---	---	---	---	----	----	----	----	----	----

Engine Ground Run Check Frequency

Check Number	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Each 100 / Yearly	x	x		x			x	x			x	x	x	x	x
Each 200									x						
Pre-Complete Overhaul	x	x	x	x		x	x	x	x	x	x	x	x	x	x
After Short Term Storage															x
After Long Term Storage	x	x	x	x		x	x	x	x	x	x	x	x	x	x

In additional the following check must be carried out after Installation, Repair and Adjustment of any of the following components.

Check Number	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Engine Installation	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Propeller Installation	x	x	x	x				x							
Fuel Control Unit	x				x	x	x	x		x	x				
HP Fuel Pump						x	x								
Fuel Nozzle						x	x								
Starting Flow Control	x				x		x	x							
Emer Fuel Control Actuator											x				
Prop Governor	x		x	x	x		x	x							
Prop Overspeed Governor											x				
Compressor Bleed Valve						x	x								
Engine Controls	x			x	x				x	x					
Low Pitch Warning Switch				x											
Suction Components												x			

Appendix – Engine Ground Run Check Sheet

Use this sheet's to record engine run result, use in conjunction with task cards.

NO.	CHECK	TARGET	ACTUAL
	ENGINE START		
	ITT (Troubleshoot If More Than 925°C)	Max. 1090 °C	521 . °C
	Cabin Heat	OFF	✓ OK?
1	Low Idle (Minimum Governing) Speed	51 - 53 % Ng	52.4 . % Ng
	Fuel Pressure / Boost Pump OFF	Light out or 25 ± 5 psi	✓ OK?
	ITT		516 . °C
	Oil Pressure		91 psi
	Oil Temperature		61 . °C
2	Propeller Governor		
	Maximum Np	1980 - 2000 rpm (90.0 - 90.9 %)	1990 . rpm
	Py Disconnected		~ % Ng
	Py Connected		93.2 . % Ng
	Difference	Maximum 0.3% Ng	%
	Airbleed Link at Minimum	1900 - 1950 rpm (86.4 - 88.6 %)	~ rpm
	Aircraft with SB 161:		
	Propeller Control Lever at Minimum	1880 - 1900 rpm (85.5 - 86.4 %)	~ rpm
3	Propeller Fine Pitch Setting (High Idle)		
	Target Torque	psi	7.4 . psi
	Power Lever to Give Np	1694 rpm (77 %)	1490 rpm
	Basic High Idle	68 - 72% Ng	68.3 %Ng
4	Propeller Low Pitch Warning		
	PCL from Reverse to Detent	Light OFF	
		1 to 2 mm before Detent	2 . mm
5	Minimum Pitch in Flight		
	Ng	67 - 73 %	% Ng
	Np	1800 - 1950 rpm (81.8 - 88.6 %)	rpm
	Torque	4 - 7 psi	psi
6	FCU Maximum Governing Speed (Ng) (Trim stop deployed)	97.1 % Ng	— % Ng



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – Engine Ground Run Check Sheet

NO.	CHECK	TARGET	ACTUAL
7	Engine Performance	Ref: AMM 71-00-00	
	Target Torque Pressure	41 psi	41.3 psi
	Fuel flow (Actual minus 23 lb / hr or 3.4 gal / hr)	90 US G ₁₅ lb / hr	50 lb / hr
	Target Ng	94.4 % Ng	93.7 % Ng
	Maximum ITT	688 °C	580 °C
8	Reverse Power Setting		
	N _p	1880 - 1925 rpm (85.5 - 87.5 %)	1880 rpm
	Torque	psi	23.8 psi
9	Propeller Overspeed Governor		
	Test Lever Selected to:		
	TEST	1880 - 1920 rpm (85.5 - 87.3 %)	1900 rpm
	NORMAL	1980 - 2000 rpm (90.0 - 90.9 %)	1980 rpm
10	Acceleration		
	64 % - 90 % Ng	2.5 - 4 secs	3 secs
	Deceleration		
	85% to 60% Ng or low idle speed(Whichever comes first)	Maximum 6-12 sec (Dependent upon altitude)	4 secs altitude (kft)
	Manual Override (MOR) (Aircraft with SB 164)		
	Use Toggle Switch In Small Increment (REF. to WARNINGS and CAUTIONS in Check 11)	Increase to 15% above Idle (Max Increase less than 4 % per Second) Decrease To Idle (Max Decrease less Than 4% per Second)	✓ OK? ✓ OK?
12	Oil Pressure	80 -100 psi	91 psi
13	Generator (Ref. 24-30-00)	Online by 60% Ng	% Ng
14	Suction (High Idle)	4.5 - 5.2 in. Hg	N/A in. Hg
15	Engine Rundown Time After Stop	MIN 30 secs	31 secs
	Additional		
	Generator Check (High Idle Under Load)	27.75 - 28.25 VDC	28.2 VDC
	After Engine Run		
	Check Eng. For Signs of Fuel/Oil/Air Leaks	NO LEAKS FOUND	✓ OK?
	Safety All Screws, Bolts, Locknuts as Req.	✓	✓ OK?



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

Ref. AMM Pilatus Porter PC6 Chapter 05-22-01, P&WC Maintenance Manual Model PT6A-27 Manual
Part No. 3013242 Chapter 72-00-00, Propeller Owner's Manual Hartzell (Manual 149)

100 HOURS / ANNUAL INSPECTION

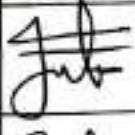
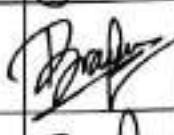
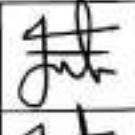
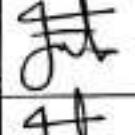
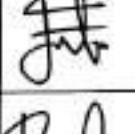
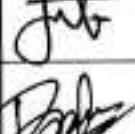
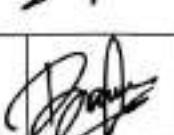
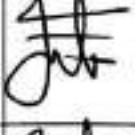
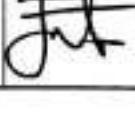
Reg. Mark	: PK-SNB	Date	: 27-NOV-2021
MSN	: 1015	Station	: BERAU
TSN / CSN	: 307-46/309 306:46 / 331	WO No.	: WO/004-SNB/X1/2021

NO	TASK	SIGNATURE	
		SIGN	STAMP
1	Aircraft document Perform inspection document folder (onboard). Check content completeness of aircraft document. (Ref. CASR 91.25)		
2	Emergency equipment list Perform emergency equipment list. Form SCA/MTC/023. Make one copy and insert into the aircraft document folder.		
3	After engine run safety all screws bolts locknuts as applicable (duplicate inspection). Perform after engine run safety all screws bolts locknuts as applicable.		
4	After engine run check engine for signs of fuel, oil, air leaks. Perform after engine run check engine for signs of fuel, oil, air leaks.		

B. AIRFRAME

Aircraft - General

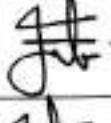
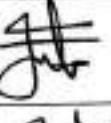
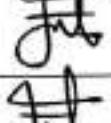
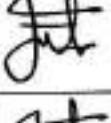
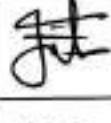
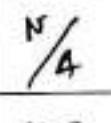
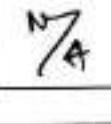
1	External surfaces Examine, particularly for fuel, oil and hydraulic leaks.		
2	Aircraft external Wash.		
3	Aircraft preparation Remove and examine the protective covers, blanks and restraints. Replace if damaged, torn or is not properly install.		
4	Placard and markings Examine and replace as necessary.		
5	Aircraft lifting Put the aircraft on jacks.		
6	Fuselage Remove access panels and fairings.		
7	Fuselage - internal Remove cockpit and cabin seats and interior fuselage linings.		

NO	TASK	SIGNATURE	
		SIGN	STAMP
8	Wings Remove access panels and fairings (not fuel tanks).		
9	Engine cowls Remove.		
10	Empennage Remove access panels and fairings.		
Chapter 21 - Air Conditioning			
1	Engine bleed air line and hoses Examine.		
2	Air inlet screens, filters and hoses Clean and examine.		
3	Mixer unit Examine.		
4	Butterfly vents - passenger cabin Examine.		
5	Emergency shut-off valve Examine.		
6	System component, pipes, cables, controls and linkages. Examine.		
7	System cables, controls and linkages Lubricate (Material No. P04-037).		
8	Air conditioning system Check operation during engine ground run checks.		
Chapter 24 - Electrical Power			
1	Generator voltage Check generator voltage at high idle under load <u>28.2</u> VDC.		
Chapter 25 - Equipment and Furnishings			
1	Pilot and Co-pilot seats Examine seat and seat attachments. Make sure that the seat adjustment mechanism operates correctly. Lubricate moving parts. (Material No. P04-011).		
2	Pilot and Co-pilot seats harnesses Examine. Inertial reel system - Operational test.		

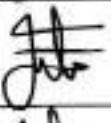
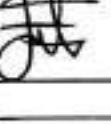


MAINTENANCE PROGRAM PILATUS PORTER PC6

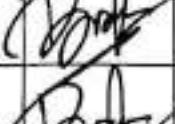
Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
3	Passenger seats Examine seats, seat attachments and seat harnesses. If seats with Torso Restraint System are installed, make sure the backrest release mechanism operates correctly. Lubricate moving parts (Material No. P04-028).		
4	Linings and curtains Examine.		
5	Emergency locator transmitter Examine Check battery expiry date <u>01 / 2026</u> .		
6	Fire extinguisher Examine Check expiry date <u>AUGUST . 2022</u> .		
7	First aid kit Examine Check expiry date <u>31 . AUGUST . 2023</u> .		
8	Crash axe Make sure it is stored correctly.		
9	Stretchers (if Installed) Examine stretchers and mountings.		
10	Parachute dispatch system (if Installed) Examine. Signal light system - Operational test.		

Chapter 27 - Flight Controls - General

1	Control column Examine. Check for excessive play at Teflon bearing at base of column by pulling up and pushing down on column. Maximum play is 0,2 mm (0.008 in.).		
2	Control lock Examine.		
3	Rudder pedals Examine. Check for excessive play and full and free range of movement. Especially examine the brake pedal at the weld for cracks		

Chapter 27 - Flight Controls - Ailerons

1	Aileron control system Examine system including stops, cables, pulleys, guides, and bellcranks.		
2	Aileron controls Do a functional test.		
3	Aileron to rudder interconnect spring Examine.		



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
4	Aileron trim tab electrical actuator (Electrical system) Examine.		
5	Aileron trim system (Mechanical or Electrical trim tab systems) Check neutral settings, sense and range of movement. Check cockpit indicator.		
Chapter 27 - Flight Controls - Rudder			
1	Rudder control system Examine system including stops, cables, pulleys, guides, and bellcranks.		
2	Rudder Do a functional test.		
3	Rudder trim tab electrical actuator (Electrical system) Examine.		
4	Rudder trim tab (Mechanical or Electrical trim tab systems) Do an inspection / check. Check neutral settings and range of movement. Check cockpit indicator.		
Chapter 27 - Flight Controls - Elevator			
1	Elevator control system Examine system including stops, cables, pulleys, guides, and bellcranks.		
2	Elevator control system Do a functional test.		
3	Elevator balance tabs Check neutral settings, sense and range of movement.		
Chapter 27 - Flight Controls - Stabilizer			
1	Horizontal stabilizer trim actuator Electrical system Examine.		
2	Horizontal stabilizer trim actuator attachments Examine. On the Lugs, look for cracks and signs of excessive asymmetrical wear.		
3	Horizontal stabilizer trim system Examine.		
4	Electrical system Do a functional test.		
Chapter 27 - Flight Controls - Flaps			
1	Flap actuator and support bracket (Electrical system) Examine.		



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

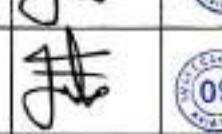
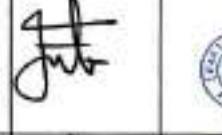
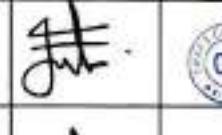
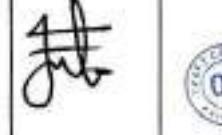
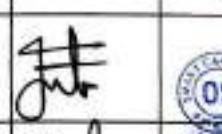
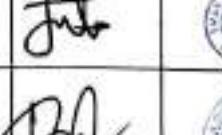
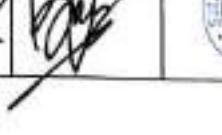
NO	TASK	SIGNATURE	
		SIGN	STAMP
2	Flap control system – Bellcranks, levers and push/pull rods (Elect. Sys) Examine		
3	Flaps Do a functional test.		
Chapter 28 - Fuel System			
1	Water collector tank and fuel filter Drain a minimum of 0,25 liters (0.5 pint) of fuel from each drain valve. Make sure that there is no water in the fuel.		
2	Fuel filter Examine.		
3	Fuel shut-off valve Examine.		
4	Main fuel tanks Examine vents, filler caps and seals.		
5	Fuel pipes and hoses Examine.		
6	Air maze fuel filter Examine inlet pipe and adjacent oil hose for chafing.		
7	Perform fuel filter clean (Airmaze). P/N: 968.35.21.147 S/N: NSN. P/N OFF : <u>968-35-21-147</u> P/N ON : <u>7A</u>		
8	Fuel flow transmitter Examine.		
9	Engine driven fuel pump (EDP) Examine.		
10	Fuel system Set shut-off valve to OPEN and then set the AUX F PUMP to ON. Look for leaks on complete fuel system and unusual noise from the fuel pump. Set AUX F PUMP to OFF and then set shut-off valve to CLOSE.		
11	Fuel System Fuel distribution system test or adjustment.		
12	Fuel Indicating System Fuel indicating system test or adjustment.		



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
Chapter 28 - Fuel System - Underwing Tanks			
1	Underwing tanks Examine.		
2	Transfer pump filters Examine and clean.		
3	Underwing tank system Check operation.		
4	Underwing Tank Fuel System Fuel system underwing tank inspection (if installed).		
5	Underwing Tank Fuel System Fuel system underwing tank inspection transfer pump filter.		
Chapter 32 – Landing Gear and Brakes			
1	Brakes Check brake pad wear. Visual Insp. Beringer.		
2	Main wheels rotation and debur discs. Perform main wheels LH and RH rotation and debur discs.		
3	Hydraulic pipes Examine.		
4	Brake system Check brake fluid level. Apply brakes, examine system for leaks.		
5	Park brake system Examine. Make sure system operates correctly		
6	Main wheel tires Examine.		
7	Main wheels Remove. Examine bearings, axles and wheels. Lubricate bearings and axles with grease (MIL - G - 81322). On installation rotate the wheel position LH to RH and vice versa		
8	Main wheels Perform main wheels inspection fill out the main wheel's inspection.		
9	Brake discs Examine. Check for wear.		

NO	TASK	SIGNATURE	
		SIGN	STAMP
10	V-struts Examine. Note: If you find damage that is more than 0,127 mm (0.005 in.) deep, reject the V-strut.		
11	V-struts If you find damage that is 0,127 mm (0.005 in.) deep or less, refer to Pilatus CMM 02270 for minor repair procedures.		
12	V-struts attachments Examine. Lubricate (Material No. P04-002)		
13	Main landing gear shock struts Examine. Lubricate (Material No. P04-002). Check fluid level.		
14	Main wheels Install. Inflate tire.		
15	Main wheel - dirt scraper Examine.		
16	Tail landing gear Examine. Make sure there are no cracks in the welded seams. Check the locking-lever pivot pins. Lubricate (Material No. P04-002)		
17	Tail wheel tire Examine.		
18	Tail wheel Remove. Examine bearings, axle and wheel. Lubricate bearings with grease (Material No. MIL-G-81322; Aeroshell 22, Royco22, Mobil 28)		
19	Tail wheel Install. Inflate tire.		
20	Steering system Examine. Check cable tension and range of movement.		
21	Debris guard Examine.		
22	Steering system Inspect steering cable tension with a turn buckle installed in the steering cable – adjust the turnbuckle to give a cable tension of minimum 32 lbs., maximal 35 lbs. and install two new locking clips.		



MAINTENANCE PROGRAM

PILATUS PORTER PC6

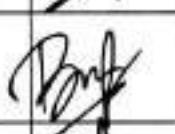
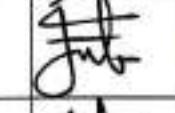
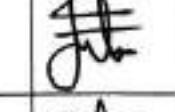
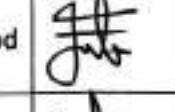
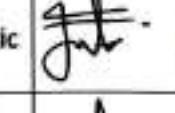
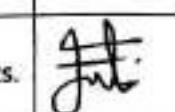
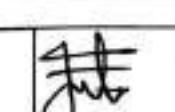
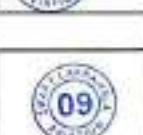
Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
Chapter 35 - Oxygen System			
1	Oxygen bottle(s) and attachment brackets (if installed) Examine.	N/A	
2	Oxygen system pipes, flexible tubes and fittings (if installed) Examine.	N/A	
3	Oxygen regulators (if installed) Examine.	N/A	
Chapter 52 - Doors			
1	Pilot, Co-pilot doors Examine. Remove safety wire. Make sure that the emergency release mechanism and latching mechanism operate correctly. Do the check of vertical play of the door Lubricate mechanism (Material No. P04-011). Install safety wire. (Material No. P02-021)		
2	Cabin RH / LH sliding door Examine door, sliding rails, rollers, stops and seals Make sure that the latching mechanism operates correctly. Lubricate mechanism. (Material No. P04-037)		
3	Cabin trap-door (if Installed) Remove trap-door hatch cover. Examine doors, hinges, seal, and structural damage. Make sure that the latching mechanism and door release mechanism operate correctly. Test door for correct operation. Lubricate mechanism (Material No. P04-037)		
Chapter 53 - Fuselage			
1	Access panels and fasteners Examine.		
2	Fuselage - external Examine.		
3	Fuselage - internal Examine these structures as follows: - cockpit floor - cabin floor - cabin floor T-rails - door frames - accessible frames, stringers, and skin.		
4	Fuselage Make sure that the drain holes are not blocked.		
Chapter 55 - Stabilizers			



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
1	Empennage Examine internal skin and structures as far as possible. Examine panels and fasteners. Make sure that the water drain holes are not blocked.		
2	Dorsal fin Examine.		
3	Vertical stabilizer Examine.		
4	Rudder - support structure Examine rudder support brackets, torque tube, control rod attachment points and attaching parts.		
5	Rudder Examine rudder skin and structure, balance weight attachment and mountings for static discharge wicks		
6	Rudder upper attachment Remove access panel EL4. Examine the attachment bolt and lockwire for security. Install access panel EL4.		
7	Rudder trim tab Examine tab, hinge, control rod attachment point and attaching parts.		
8	Horizontal stabilizer Inspection/ Check.		
9	Horizontal stabilizer actuator Examine the attachment brackets		
10	Elevator support structure Examine elevator support brackets, hinge bearings, control rod attachment points, control lever and attaching parts		
11	Elevator Examine skin and structure, fixed tab (H4 only) and mountings for static discharge wicks		
12	Elevator attachments Remove access panels ET1 and EB1. Examine the attachment bolts and lock wire for security. Install access panels ET1 and EB1		
13	Elevator balance tab Examine tab, hinges, control attachment points and attaching parts. Lubricate hinges. (Material No. P04-011)		
Chapter 56 - Windows			
1	Windows and windshields Examine.		

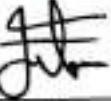
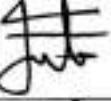
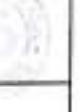
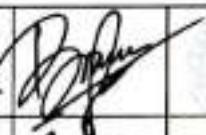
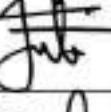
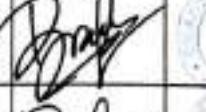
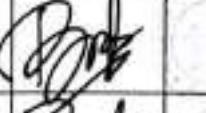
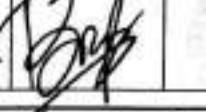


MAINTENANCE PROGRAM

PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
2	Emergency window Examine.		
Chapter 57 - Wings			
1	Access panels and fasteners Examine.		
2	Wing - external Examine skin and structure, particularly in area of fuel tanks, all access hole and external component or equipment attaching points. Look for loose rivets along the main spar (this can indicate advanced corrosion of the spar cap).		
3	Wing - internal Examine internal skin and structure, particularly in the area of fuel tank, as far as possible. Look for signs of corrosion on the upper and lower main spar caps.		
4	Wings Make sure that the drain holes are not blocked.		
5	Wing struts - external Examine attachment brackets. Examine strut exterior.		
6	Wing struts - internal Examine.		
7	Wing tips Examine.		
8	Aileron support structure Examine aileron support brackets, hinge bearings, control rod attachment points and attaching parts.		
9	Ailerons Examine aileron skin and structure, balance arms and static discharge wicks.		
10	Aileron - balance tabs Examine balance tabs, tab control rods, rod ends, support brackets, hinges and attaching parts. Lubricate hinges (Material No. P04-011).		
11	Flap support structure Examine flap support brackets, hinge bearings, control rod attachments, actuator support bracket and attaching parts.		
12	Flaps Examine structure and skin. Use a mirror and light to examine the skin of the flaps and slats for cracks in the areas where the angles are attached.		
General - Close Up			
NOTE: Do these steps when the engine, electrical and avionic inspections are complete			

NO	TASK	SIGNATURE	
		SIGN	STAMP
1	Access panels and fairings Install.		
2	Fuselage - internal Install internal linings.		
3	Engine cowls Install.		
4	Aircraft Remove the aircraft from jacks.		
5	Aircraft Make sure that the work area is clean and clear of tools and other items.		
C. PROPELLER & ENGINE			
Chapter 61 - Propeller			
1	Spinner dome Remove.		
2	Propeller de-ice boots, slip-ring and brushes Examine.		
3	Slip-ring (Beta) Examine. Check gap between slip-ring and carbon block is no more than 0,50 mm (0.02 in.).		
4	Spinner body and backplate Examine.		
5	Blades Examine.		
6	Spinner Dome Install.		
Chapter 71 - Powerplant			
1	Power Recovery Wash Perform power recovery wash.		
2	Engine Run Perform engine run IAW HARTZELL STC SA377CH.		
3	Engine compartment Clean engine, engine compartment and cowlings.		
4	Engine compartment Examine. Make sure water drain holes are not blocked.		

**MAINTENANCE PROGRAM****PILATUS PORTER PC6****Appendix – 100 Hours / Annual Inspection**

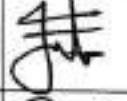
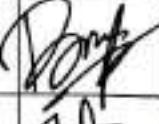
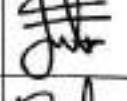
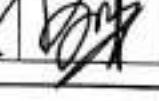
NO	TASK	SIGNATURE	
		SIGN	STAMP
5	Powerplant and accessories Examine		
6	Powerplant and accessories Inspect and pay particular attention to rear linkage cam box, fuel control unit arm, telescopic rod and rod end fittings. Disconnect rod ends and clean using solvent (PWC11-027) or (PWC11-031). Examine rod end for corrosion, roughness in rotation, side play and radial play. Lubricate with light grease (PWC04-001) or MIL-G-23827 after engine external wash. Reinstall rod ends and torque to specified value. (Ref.76-10-00) Check free movement and linkages.		
7	Powerplant and accessories Air inlet screen - Inspect cleanliness. (Ref.72-20-00) Inspect the air inlet screen wire mesh for cleanliness and/or damage. Screens with broken wire mesh must be replaced. Clean undamaged screens (Ref. Cleaning / Painting). Inspect the rubber sealing rims and flanges of the screen for security and damage.		
8	Powerplant and accessories Gas Generator Case - Inspect External surface, and fire seal mount ring brackets for cracks, distortion and corrosion. (Ref. 72-30-04) Examine for general condition, including cracks, distortion, corrosion and evidence of overheating. Minor corrosion on exposed surface of gas generator case may be removed. (Ref. Approved Repairs). If the condition of the corrosion exhibited on the exposed surfaces of the gas generator case indicates that further examination of the fuel manifold and igniter bosses is required, remove the fuel manifold adapters (Ref. 73-10-05, Removal/Installation) and spark igniters. (Ref. 74-20-00, Removal/Installation). Examine the mounting pads, fuel nozzle bosses and machined surfaces for corrosion and wear. Isolated corrosion pitting not closely grouped, less than 0.010 inch deep, not covering more than 75 percent of the surface is acceptable without repair.		
9	Powerplant and accessories Fireseal Mount Rings - Inspect Cracks and attachment of brackets and seals (Ref. 72-30-01/-02) Examine the rear fireseal mount ring halves for attachment, damage and condition. NOTE: For the external tubes/lines passing through the mount rings, refer to the relevant chapters in this manual. Examine the circumferential insulating strips for attachment. Loosened strips may be rebonded.		



MAINTENANCE PROGRAM

PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
10	<p>Powerplant and accessories</p> <p>Exhaust Duct - Inspect cracks and distortion. (Ref. 72-50-05, Maintenance practices)</p> <p>Examine the outer surface condition for buckling, ripples or similar distortion. Inspect outer surface, particularly in vicinity of flanges A and C for cracking in metal skin, welds, or flange bolt holes. Inspect exhaust port flanges for cracking.</p> <p>Cracks not exceeding 0.500 inch in length and do not progress into the stitch weld or cracks in a tangential direction not exceeding 1.000 inch long are acceptable provided they are stop drilled with a 1/16 (0.0625) inch drill.</p> <p>Check for the integrity of internal structure through the exhaust ports.</p> <p>NOTE: Refer to the Aircraft Maintenance Manual for removal/installation of the exhaust stubs.</p> <p>Examine the internal structure as far as possible for cracks, looseness and distortion.</p> <p>Inspect Engines that exhibit interior welds (Ref. 72-50-05, Maintenance Practices) visually inspect the forward area of the exhaust duct for cracks, from the propeller reduction gearbox mounting flange to 2 inches aft around the entire circumference of the duct. Exhaust ducts are considered serviceable provided.</p>		
11	<p>Powerplant and accessories</p> <p>Accessories - Inspect attachment of accessories and linkages, air, oil, fuel lines (Ref. 73-10-07/-08) or (Ref. 70-00-00, Standard Practices Inspection).</p> <p>Inspect Fuel, Oil and Air Tubes from scratches, Nick, chafing, dents, pitting, rust and strainer.</p> <p>Inspect Security of pneumatic lines (Ref. 73-10-07/-08)</p> <p>Examine tube assemblies (Ref. 70-00-00, STANDARD PRACTICES - INSPECTION).</p> <p>Blend out minor damage that does not exceed specified limits. Replace the tube assemblies damaged beyond specified limits.</p> <p>Inspect heated rear pneumatic line.</p>		
12	Engine External Examine.		
13	Engine flexible and rigid pipes Examine.		
14	Engine cowling and seals Examine.		
15	Fireshields and seals Examine.		
16	Shock mounts Examine.		



MAINTENANCE PROGRAM

PILATUS PORTER PC6

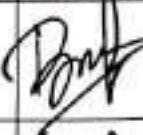
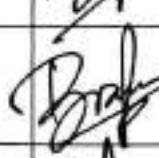
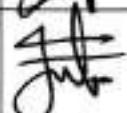
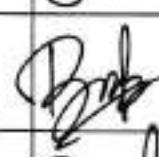
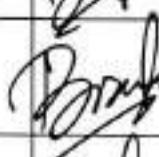
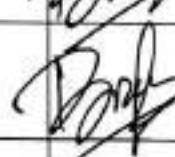
Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
17	Support ring Examine.		
18	Support struts Examine.		
19	Electrical harnesses Examine.		
Chapter 72 - Engine			
1	Compressor inlet screen Clean. Examine.		
2	Gas generator case Examine.		
3	Propeller shaft oil seal Examine, look for oil leaks		
4	Accessories Examine.		
Chapter 73 - Engine Fuel and Control			
1	HP fuel pump Examine.		
2	HP fuel pump outlet filter Examine, replace if contaminated		
3	Fuel HP Outlet Filter Perform fuel HP outlet filter replacement. P/N : AN6235-3A or ALTERNATIVE P/N. P/N OFF : <u>AN6235-3A</u> P/N ON : <u>AN6235-8A</u>		
4	Fuel control unit Examine Check for leaks from vent. (Ref. P&WC EMM 73-20-00) Check flow divider and dump valve for installation and leaks (Ref. EMM 73-10- 06). Check FCU for installation, linkages and pneumatic tubes (Ref. EMM 73- 20-00). Evidence of FCU bearing washout indicated by traces of blue dye effluent is caused by a mixture of bearing grease and fuel. For post-SB1472 engines fitted with a manual override on the fuel control, check FCU Manual Override System for static operation (Ref. EMM 71-00-00).		



MAINTENANCE PROGRAM PILATUS PORTER PC6

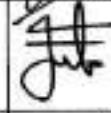
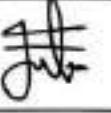
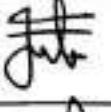
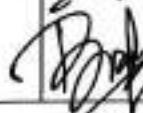
Appendix – 100 Hours / Annual Inspection

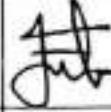
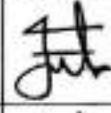
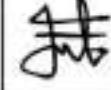
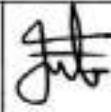
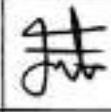
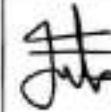
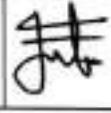
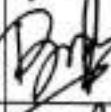
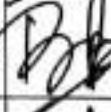
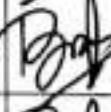
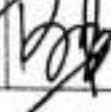
NO	TASK	SIGNATURE	
		SIGN	STAMP
5	Fuel control unit Perform SIL NO. PT6A-221R01 – FCU Health Monitoring - Deceleration Check. Ref. P&WC PT6A-27 MM 71-00-00		
6	Pneumatic System Check P3 filter for installation. Clean or replace filter, dependent on condition, service experience or environment.		
7	Starting flow control unit Examine.		
8	Propeller governor Examine.		
9	Air pipes Examine.		
10	Fuel pipes Examine.		
11	Gas generator case drain valves Examine.		
12	Igniter exciter Examine and check Ignition system/current regulator for installation and condition (Ref.74-10-01 and 74-10-02) Inspect the ignition excitors for signs of damage and general condition. Inspect the input and output connectors for damage, paying particular attention to the connector threads for corrosion. Inspect the cover and box of the regulator for general condition. A cracked or distorted mounting bracket on the box, or loose components on the box or cover, must be repaired at an overhaul facility. Inspect the seal on the box and the sealing gasket on the cover for general condition. A loose seal or gasket may be rebonded using adhesive cement (PWC08-010).		
13	Ignition cables Examine and check ignition cable for chafing, wear and installation (Ref.74-20-01) Inspect cables for signs of damage to braiding and general condition. Inspect cable coupling nuts for corrosion. Inspect central conductor and insulation for contamination and burning. Do retention test on igniter end of cable only: <ul style="list-style-type: none">- Connect contact with tool (Ref. Table 201).- Contact must hold a 0.125 lb. weight.- If contact does not hold weight, ship cable to an authorized repair shop for inner cable replacement.		



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

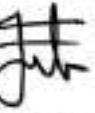
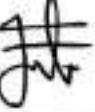
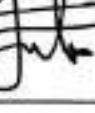
NO	TASK	SIGNATURE	
		SIGN	STAMP
14	Spark igniters Examine and check spark igniters/glow plugs for cleanliness and erosion. Check function (Ref. 74-20-02 and 74-00-00). Inspect the exterior cylindrical area of the firing end of the igniter shell for chafing wear. Wear is acceptable to a depth of 0.015 inch. Inspect the igniter shell and electrode for erosion (Ref. Fig. 207 and Table 202). If erosion equals or exceeds amounts shown, reject the spark igniter. Do a functional test on acceptable and replacement spark igniters (Ref. 74-00-00, Adjustment/Test).		
15	Interconnect rod Inspect accessible lockwire and safety cable for security and installation of the interconnect rod.		
16	Idle control system Examine.		
17	Power control system Examine.		
18	Propeller control system Examine.		
19	Engine controls Lubricate rod ends with grease. (Material No. P04-002).		
20	Emergency fuel control system Examine. Do a functional test.		
Chapter 78 - Exhaust			
1	Exhaust duct Examine.		
2	Exhaust stubs Examine.		
Chapter 79 - Oil			
1	Oil cooler system Examine. Flap - Do an operational test.		
2	Oil filter Examine and clean.		
3	Chip detector Do a functional test. Check Magnetic Detectors for continuity.		

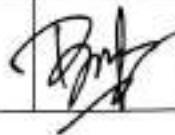
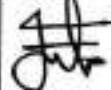
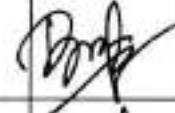
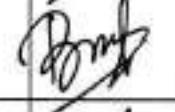
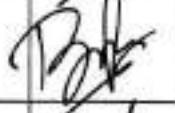
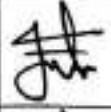
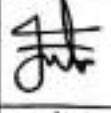
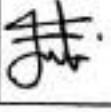
NO	TASK	SIGNATURE	
		SIGN	STAMP
4	Scavenge Oil pump Examine.		
5	Oil filler cap and dipstick Examine.		
6	Oil separator (Aircraft with SB75) Examine.		
General			
1	Powerplant Make sure that the work area is clean and clear of tools and other items.		
2	Powerplant Do a functional test.		
3	Powerplant (Post P&WC SB 1568 only) Do a deceleration check. NOTE: Not required if FCU is identified with 'RE52' or 'SB 73-3', or with a serial number that has the letter 'F' as a prefix.		
D. ELECTRICS AND INSTRUMENTS			
Chapter 21 - Air Conditioning			
1	Cockpit blower motor Examine and operational test.		
2	Cabin blower motor Examine and operational test.		
Chapter 24 - Electrical Power			
1	Battery mountings Examine attachment fittings, ventilation hoses, cable connectors, wiring.		
2	External power receptacle Examine.		
3	Starter/Generator Examine.		
4	Starter/Generator Examine QAD adaptor and clamp.		
5	Starter and power generation relays Examine. Functionally test during engine ground run.		

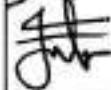
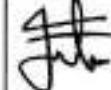
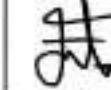


MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
6	Voltage regulator Examine. Functionally test during engine ground run.		
7	Cockpit - switches and circuit breakers Examine. Make sure that placards are readable.		
8	Cables, plugs, connectors, relays, terminal blocks Examine in these areas: - engine compartment - cockpit - fuselage - empennage - wings		
9	Bonding Examine bonding leads in these areas: - engine compartment - cockpit - fuselage - empennage - wings - landing gear		
Chapter 27 - Flying Controls			
1	Aileron trim actuator Examine. Operational test.		
2	Rudder trim actuator Examine. Operational test.		
3	Flap actuator Examine. Operational test.		
4	Horizontal stabilizer actuator Examine. Operational test.		
Chapter 28 - Fuel			
1	Auxiliary fuel pump Operational test.		
2	Underwing fuel pumps. (if installed) Operational test.		

NO	TASK	SIGNATURE	
		SIGN	STAMP
Chapter 30 - Ice and Rain Protection			
1	Pitot tube and static port heaters Operational test.		
Chapter 31 - Indicating/Recording			
1	Instrument panel shockmounts Examine.		
2	Instruments Examine.		
3	Annunciator panel Examine.		
Chapter 33 - Lights			
1	Navigation lights Examine. Operational test.		
2	Anti-collision strobe lights or beacons Examine. Operational test.		
3	Landing lights Examine. Operational test.		
4	Cockpit lights Examine. Operational test.		
5	Instrument lights Examine. Operational test.		
6	Warning lights Examine. Operational test.		
7	Passenger cabin lights Examine. Operational test.		
Chapter 34 - Navigation			
1	Pitot tube Examine.		
2	Static ports Examine.		
3	Pipes - pitot, static and vacuum Examine.		

NO	TASK	SIGNATURE	
		SIGN	STAMP
4	Vertical speed indicator Reset to zero.		
5	Airspeed indicator Check, calibrate if necessary.		
6	Gyro operated instruments Operational test.		
7	Magnetic compass Check correction card date validity <u>01 - 07 - 2026</u>		
Chapter 37 – Vacuum			
1	Vacuum system suction regulator Clean filter.		
2	Vacuum system Examine. Replace if air filter is contaminated.		
3	Vacuum system pressure regulator Examine.		
4	Vacuum system ejector Examine.		
E. AVIONICS			
Chapter 23 - Communications and Chapter 34 - Navigation			
1	Antennas Examine.		
2	Headsets and microphones Clean, Examine.		
3	Avionic equipment Examine.		
4	Avionic connectors and cables Examine.		
5	Avionic equipment racks and shock mounts Examine.		
6	All Avionics systems Examine switches and circuit breakers.		



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – 100 Hours / Annual Inspection

NO	TASK	SIGNATURE	
		SIGN	STAMP
7	All Avionics systems Operational test.		

PERSONNEL PARTICIPATING IN THIS INSPECTION			
NAME	POSITION	SIGNATURE	LICENSE NUMBER
FEBRI HERMANAN	ENGINEER		6445
BERAUL	ENGINEER		5109
KRISTIYONO	MECHANIC		

RETURN TO SERVICE

The work recorded above has been carried out in accordance with the requirements of the Civil Aviation Safety Regulation for the time being in force and in that respect the aircraft is consider fit for Release to Service.

Name : FEBRI HERMANAN Stamp :
Signature : Place/Date : BERAUL / 29- NOV- 2021



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – FUEL DISTRIBUTION SYSTEM – ADJUSTMENT TEST

Ref. AMM Pilatus Porter Chapter 28-20-00 FUEL DISTRIBUTION SYSTEM – ADJUSTMENT TEST

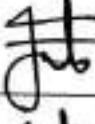
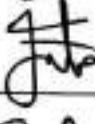
Reg. Mark : PK-SNB Date : 28-NOV-2021
MSN : 1015 Station : PERALI
TSN / CSN : 307-46 / 309 WO No. : WO/004-SNB/X1/2021
306:46 / 331

NO	TASK	SIGNATURE	
		SIGN	STAMP
Tools and Equipment			
	Part No. Description	Remarks	
	Stopwatch		
	Fuel container with measured graduation in liters or US gals	Minimum capacity 40 liters (10 US gals)	
Procedure			
A. Job Set Up			
1	Make sure that the aircraft is tall down ($10^\circ \pm 1^\circ$ nose up).		
2	Make sure that the aircraft is refueled to maximum (Ref. 12-11-28, page Block301).		
3	Set the fuel-system valve lever to CLOSED.		
4	Open the fuel-filter access panel PB3.		
5	Open the engine access panel PL1.		
B. Preparation			
1	Put the fuel container below the fuel filter.		
2	Open the filter drain valve (4) and let the fuel drain.		
3	When the flow of fuel stops, close the drain valve (4).		
4	Remove the outlet hose (2) from between the fuel flow transmitter (3) and the Engine Driven Pump (EDP) (1).		

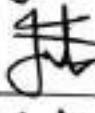
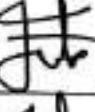
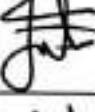
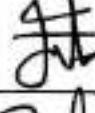
Appendix – FUEL DISTRIBUTION SYSTEM – ADJUSTMENT TEST

NO	TASK	SIGNATURE	
		SIGN	STAMP
5	Turn the outlet hose through 180 degree, then install the outlet hose (2) to the fuelflow transmitter (3) with the other end through the access panel PB3.		
6	Put the fuel container below the disconnected end of the outlet hose (2). Do not extend the length of the hose for the test.		
7	Set the fuel-system valve-lever to OPEN until you get a constant flow of fuel in to the container.		
8	Set the fuel-system valve-lever to CLOSED and empty the container.		

C. Gravity Flow System

1	Put the fuel container below the disconnect end of the outlet hose.		
2	Set the fuel-system valve-lever to OPEN for 5 minutes.		
3	Set the fuel-system valve-lever to CLOSED.		
4	Make sure that there is not less than 6,95 liters (1,84 US gals) of fuel in the container.		
5	Empty the container.		

D. Auxiliary Fuel Pump System

1	Put the fuel container below the disconnected end of the outlet hose		
2	Energize the aircraft electrical system.		
3	Set the AUX F PUMP switch to ON and immediately set the fuel-system valvelever to OPEN.		
4	After 5 minutes, set the fuel-system valve lever to CLOSED and the AUX F PUMPswitch to OFF.		
5	De-energize the aircraft electrical system.		
6	Make sure that there is not less than 22,1 liters (5,84 US gals) of fuel in the container.		



MAINTENANCE PROGRAM PILATUS PORTER PC6

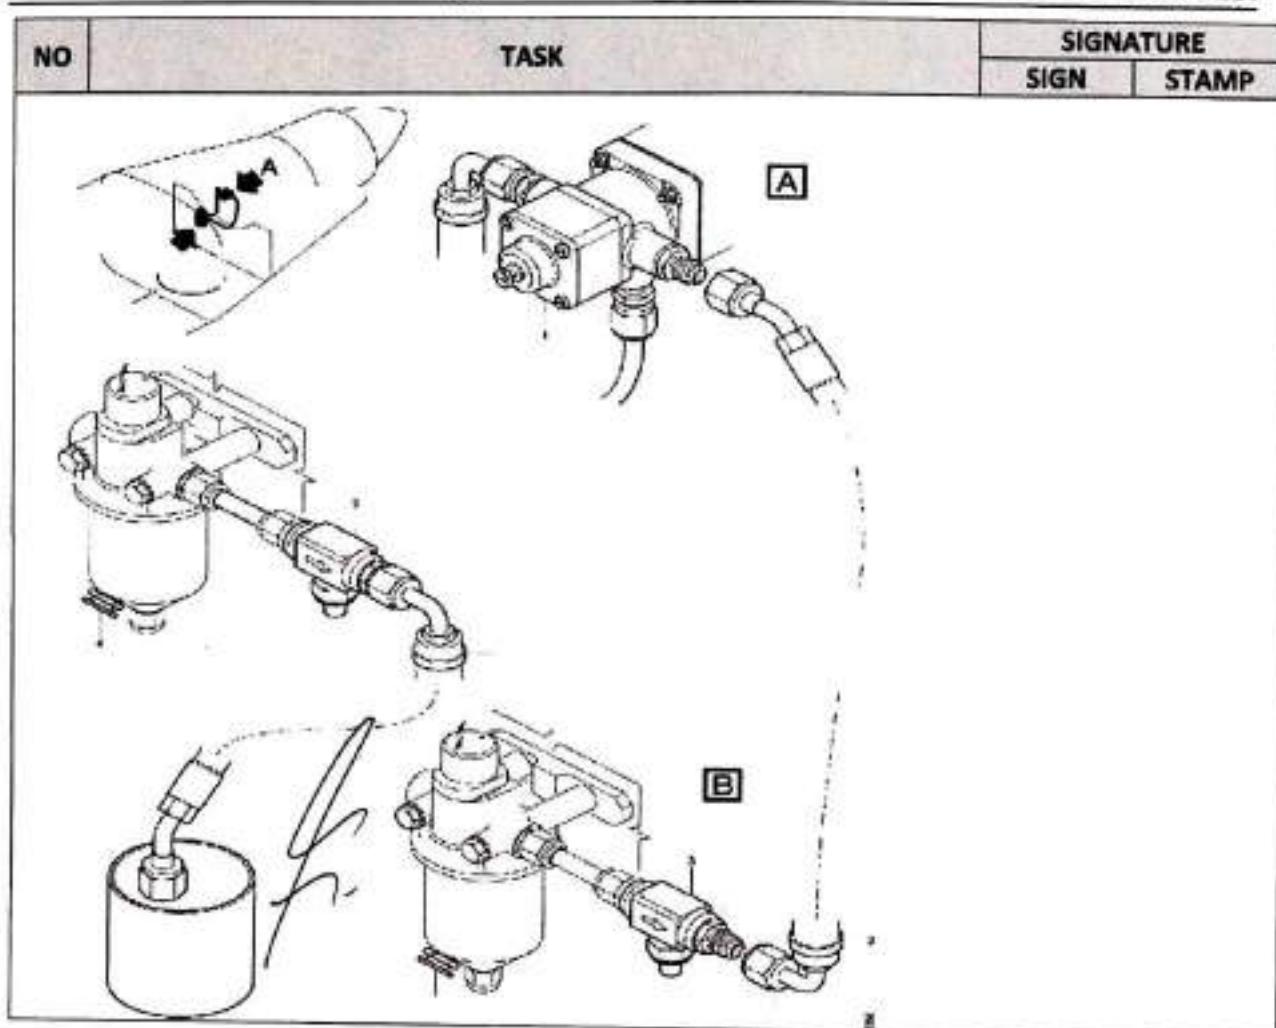
Appendix – FUEL DISTRIBUTION SYSTEM – ADJUSTMENT TEST

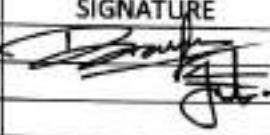
NO	TASK	SIGNATURE	
		SIGN	STAMP
7	Empty the container.		

E. Close Up (Ref. Fig. 501)

1	Remove the outlet hose (2) from the fuel flow transmitter (3).	<i>Bratz</i>
2	Install the outlet hose (2) between the fuel flow transmitter (3) and the EDP (1)	<i>Bratz</i>
3	Energize the aircraft electrical system.	<i>Bratz</i>
4	Set the fuel-system valve lever to OPEN.	<i>Bratz</i>
5	Set the AUX F PUMP switch to ON.	<i>Bratz</i>
6	Do leak checks at the outlet hose (2) and the tee adapter (3) connection. No leaks are permitted.	<i>Bratz</i>
7	Set the AUX F PUMP to OFF.	<i>Bratz</i>
8	Set the fuel-system valve lever to CLOSED.	<i>Bratz</i>
9	De-energize the aircraft electrical system.	<i>Bratz</i>
10	Discard the fuel as given in the local regulations.	<i>Bratz</i>
11	Make sure that the work area is clean and clear of tools and other items.	<i>Bratz</i>
12	Close the fuel-filter access panel PB3 and the engine access panel PL1.	<i>Bratz</i>

Appendix – FUEL DISTRIBUTION SYSTEM – ADJUSTMENT TEST

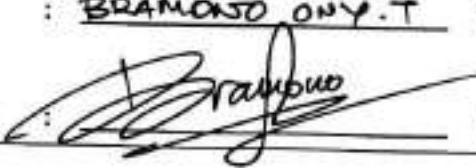


PERSONNEL PARTICIPATING IN THIS INSPECTION			
NAME	POSITION	SIGNATURE	LICENSE NUMBER
BRAMONDO ONY.T	ENGINEER		57001 - 64445
PERRI HERMANAU	ENGINEER		

RETURN TO SERVICE

The work recorded above has been carried out in accordance with the requirements of the Civil Aviation Safety Regulation for the time being in force and in that respect the aircraft is consider fit for Release to Service.

Name : BRAMONDO ONY.T Stamp : 

Signature : 

Place/Date : BERAU / 28 / 11 / 2021

Appendix – FUEL INDICATING SYSTEM – ADJUSTMENT/TEST
**Ref. AMM Pilatus Porter Chapter 28-40-00
FUEL INDICATING SYSTEM – ADJUSTMENT/TEST**

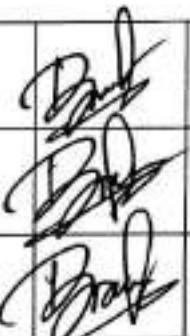
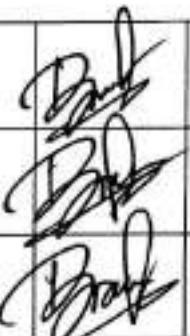
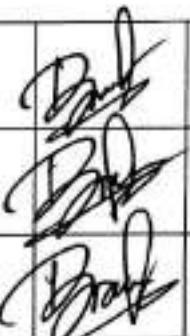
Reg. Mark : PK-SNB Date : 28 - NOV - 2021 .
 MSN : 1015 Station : BERALI
 TSN / CSN : 307:48 / 309 WO No. : WO/004-SNB/XI/2021.
306:46 / 331

NO	TASK	SIGNATURE	
		SIGN	STAMP

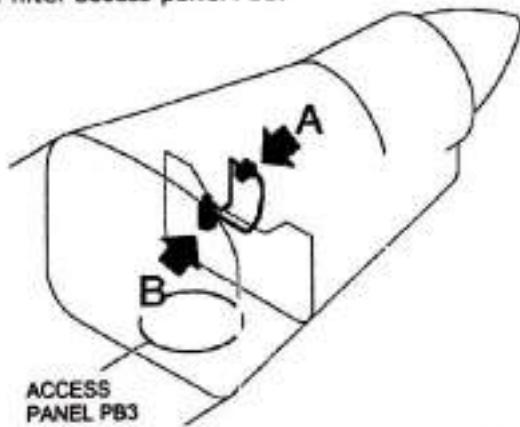
Tools and Equipment

Part No.	Description	Remarks
	Stopwatch	
	Fuel container with measured graduation in liters or US gals	Minimum capacity 40 liters (10 US gals)

Procedure
A. Job Set Up

1	Make sure that the aircraft is tail down ($10^\circ \pm 1^\circ$ nose up)	
2	Make sure that the aircraft is refuelled to maximum (Ref. 12-11-28, Page Block 301)	
3	Set the fuel-system valve-lever to CLOSED	

Open the fuel-filter access-panel PB3.



4	Open the fuel-filter access-panel PB3.	
5	Open the engine acces panel PL1	

B. Preparation (Ref. Fig. 1)

1	Put the fuel container below the fuel filter.	
---	---	---

Appendix – FUEL INDICATING SYSTEM – ADJUSTMENT/TEST

NO	TASK	SIGNATURE	
		SIGN	STAMP
2	Open the filter drain valve (4) and let the fuel drain.		
3	When the flow of fuel stops, close the drain valve (4).		
4	Remove the outlet hose (2) from between the fuel flow transmitter (3) and the EngineDriven Pump (EDP) (1).		

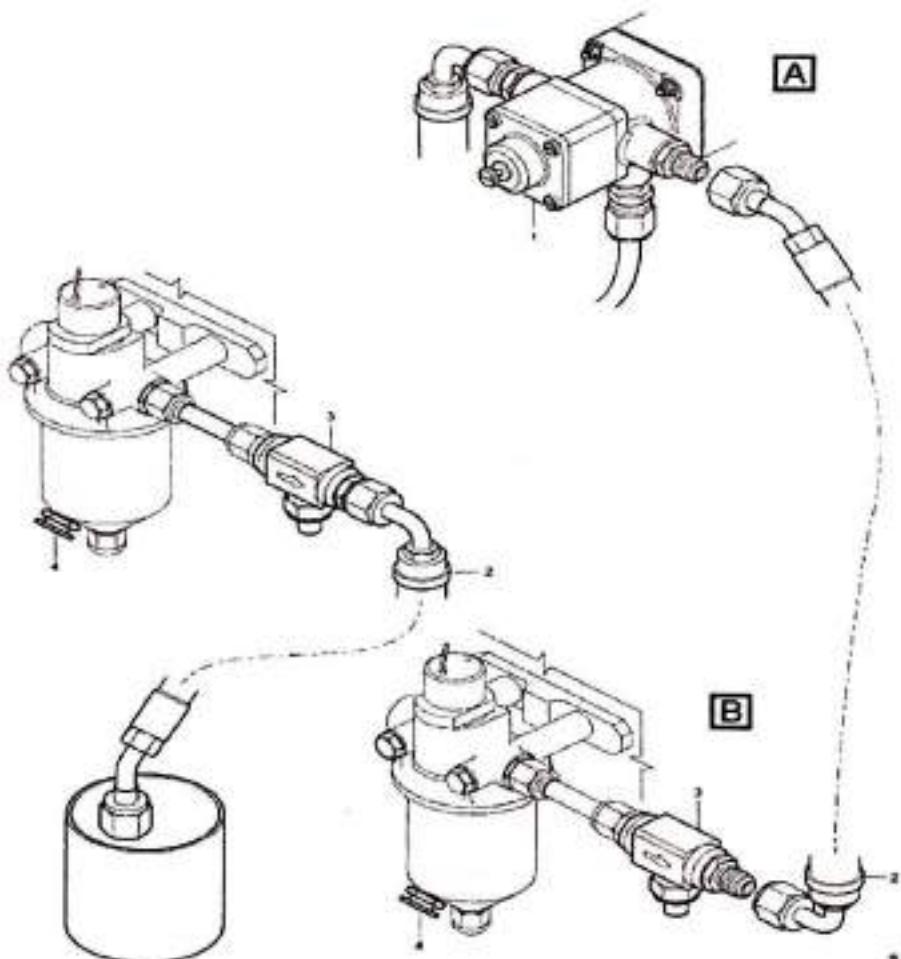
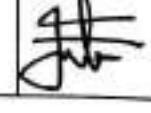


Figure 1 fuel Disrtibution – Adjusment/Test

5	Turn the outlet hose through 180 degrees, then install the outlet hose (2) to the fuelflow transmitter (3) with the other end through the access panel PB3.		
6	Put the container below the disconnect end of the outlet hose (2). Do not extend thelength of the hose for the test.		
7	Energize the aircraft electrical system.		



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – FUEL INDICATING SYSTEM – ADJUSTMENT/TEST

NO	TASK	SIGNATURE	
		SIGN	STAMP
8	Set the fuel-system valve-lever to OPEN until you get a constant flow of fuel into the container.		
9	Set the fuel-system valve-lever to CLOSED and empty the container.		
10	Reset the fuel used totalizer to zero.		

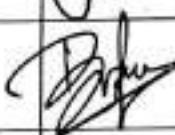
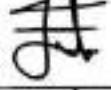
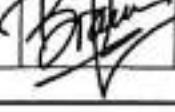
C. Low Fuel Flow Indication Check (Ref. Fig. 1)

1	Set the fuel-system valve-lever to OPEN.		
2	When the fuel flow has stabilized, record the fuel flow indication. Fuel flow: <u>22 GPH</u>		
3	After 5 minutes set the fuel-system valve-lever to CLOSED		
4	Record the fuel used from the fuel used totalizer. Fuel used: <u>2 GAL</u>		
5	Measure the quantity of the fuel in the container. Quantity: <u>7 liter / 1.85 GAL</u>		
6	Make sure the difference between the fuel used totalizer indication and the quantity of fuel in the container is not more than ± 1 liter (± 0.26 US gals).		
7	Calculate the fuel rate for 1 hour as follows: - (Quantity of fuel in container after 5 minutes) \times 12 = Flow rate/hour.		
8	Compare the calculated fuel flow with the actual fuel flow recorded at step (2): - The difference between the calculated fuel flow and the actual fuel flow must be the same ± 12.5 liter/hour (± 3.3 gals/hour)		
9	If the difference between the actual and calculated fuel flow is out of limits, replace the indicators, signal conditioner or fuel flow transmitter. NOTE: IT IS RECOMMENDED THAT THE FUEL FLOW TRANSMITTER IS REPLACED FIRST.		
10	Empty the container.		

D. High Fuel Flow Indication Check Using the Auxiliary Fuel Pump System (Ref. Fig. 1)

1	Set the AUX F PUMP switch to ON.		
---	----------------------------------	--	--

Appendix – FUEL INDICATING SYSTEM – ADJUSTMENT/TEST

NO	TASK	SIGNATURE	
		SIGN	STAMP
	<p>Move the fuel-system valve-lever towards the CLOSED position to get an indicated fuel flow of between 189 and 285 liters/hour (50 and 75 US gals/hour). Record the indicated fuel flow.</p> <p>Fuel flow: <u>70 GPH</u></p>		
2	<p>NOTE: TO MAKE THE TEST EASIER, YOU CAN MAKE AN ORIFICE TO GET THE CORRECT FUEL FLOW. USE A METAL BLANK DRILLED WITH A 2,4 mm (3,32 in) HOLE INSTALLED IN THE END OF THE DISCONNECTED OUTLET HOSE (2). THIS WILL GIVE THE REQUIRED FUEL FLOW WITH THE FUEL-SYSTEM VALVE-LEVER FULLY "OPEN".</p>		
3	<p>When the fuel flow is correct and constant, get a second person and do these steps at the same time.</p> <p>Reset the fuel totalizer.</p> <p>Record the quantity of fuel in the container.</p> <p>Start the stopwatch.</p>		
4	<p>After 5 minutes, set the fuel-system valve-lever to CLOSED and the AUX F PUMPswitch to OFF.</p>		
5	<p>Record the fuel used from the fuel used totalizer.</p> <p><u>Used Fuel flow: 6 GAL</u></p>		
6	<p>Measure the quantity of the fuel in the container and subtract the quantity recorded in Step (3).</p> <p>Quantity: <u>23 GPH / 6 GAL</u></p>		
7	<p>Make sure the difference between the fuel used totalizer indication and the quantity of fuel in the container is not more than \pm 1 liter (\pm0,26 US gals).</p>		
8	<p>Calculate and record the flow rate for 1 hour as follows:</p> <p>Quantity of fuel measured at step (6) \times 12 = Fuel flow rate /hour.</p>		
9	<p>Make sure that the flow rate recorded at step (8) is not more than \pm 12,5 liters/hour (\pm3,3 US gals/hour) different to the fuel flow indication recorded in Step (2).</p>		
10	<p>If the difference between the actual and calculated fuel flow is out of limits, replace the indicators, signal conditioner or fuel flow transmitter.</p> <p>NOTE: IT IS RECOMMENDED THAT THE FUEL FLOW TRANSMITTER IS REPLACED FIRST.</p>		
E. Close Up (Ref. Fig. 1)			
1	If necessary, remove the orifice from the outlet hose (2).		
2	Remove the outlet hose (2) from the fuel flow transmitter (3).		



MAINTENANCE PROGRAM

PILATUS PORTER PC6

Appendix – FUEL INDICATING SYSTEM – ADJUSTMENT/TEST

NO	TASK	SIGNATURE	
		SIGN	STAMP
3	Install the outlet hose (2) between the fuel flow transmitter (3) and the EDP (1).		
4	Energize the aircraft electrical system.		
5	Set the fuel-system valve lever to OPEN.		
6	Set the AUX F PUMP switch ON.		
7	Do a leak check at the outlet hose (2) and the tee adapter (3) connection. No leaks are permitted.		
8	Set the AUX F PUMP switch to OFF.		
9	De-energized the aircraft electrical system.		
10	Discard the fuel in accordance with local regulation.		
11	Make sure that the work area is clean and clear of tools and other items.		
12	Close the fuel-filter access panel PB3.		
13	Close the engine access panel PL1.		

PERSONNEL PARTICIPATING IN THIS INSPECTION			
NAME	POSITION	SIGNATURE	LICENSE NUMBER
BRANDON OUY.T	ENGINEER		5709.
TERRI HERMANAN	ENGINEER.		6445.
KRISTIYONO	MECHANIC		



MAINTENANCE PROGRAM PILATUS PORTER PC6

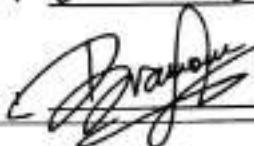
Appendix – FUEL INDICATING SYSTEM – ADJUSTMENT/TEST

RETURN TO SERVICE

The work recorded above has been carried out in accordance with the requirements of the Civil Aviation Safety Regulation for the time being in force and in that respect the aircraft is consider fit for Release to Service.



Name : BRAMONDO Ong TKAO Stamp : _____

Signature 

Place/Date : NAIA FSE 128 . NBN - 2021



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – FUEL SYSTEM UNDERWING TANK INSPECTION TRANSFER PUMP FILTERS

Ref. AMM Pilatus Porter Chapter 28-15-00

FUEL SYSTEM UNDERWING TANK INSPECTION TRANSFER PUMP FILTERS

Reg. Mark	: <u>PK-SNB</u>	Date	: <u>28- NOV - 2021</u>
MSN	: <u>1015</u>	Station	: <u>BERAU</u>
TSN / CSN	: <u>307-48 / 309</u> <u>306 : 46 / 331</u>	WO No.	: <u>W0/004-SNB/X1/2021</u>

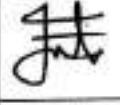
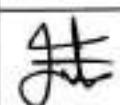
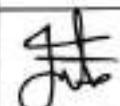
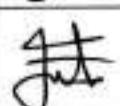
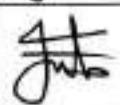
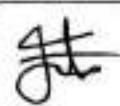
NO	TASK	SIGNATURE	
		SIGN	STAMP
Tools Equipment for Aircraft with Underwing Fuel system and Fuel Transfer Pump. P/N: 115.55.06.443 Regulated Air supply			

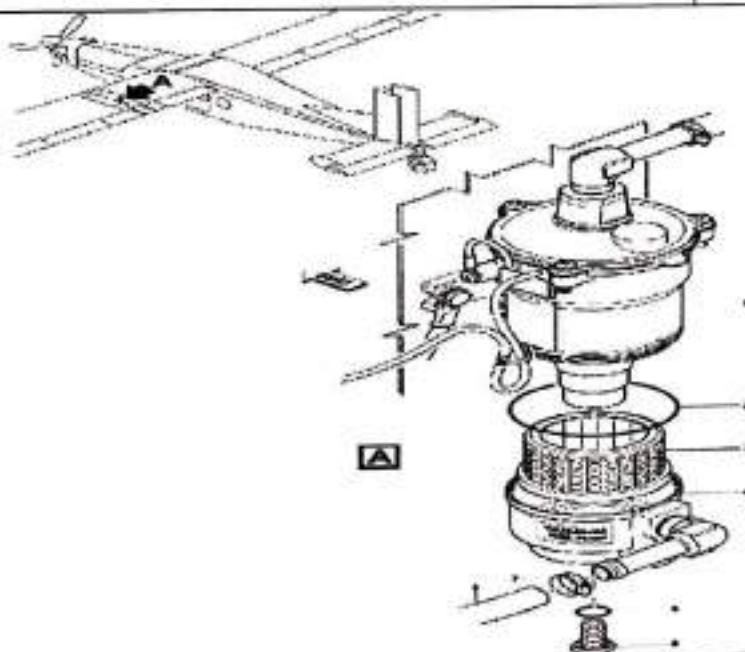
Expendable Parts			
Part no:	Description	Fig. Item no.	
968.84.30.305	Filter (if required)	Fig 701, item 3	
946.91.27.355	O-ring	Fig 701, item 5	
968.84.30.309	O-ring	Fig 701, item 2	

WARNING: OBEY THE SAFETY PRECAUTIONS GIVEN IN 28-00-00, PAGE BLOCK 201, WHEN YOU DO WORK ON THE FUEL SYSTEM.

1	Open and install the safety clip to the circuit breaker EXT FUEL.	 
2	Remove the Access panel LB7, LB9, RB7 and RB8.	 
3	Loosen the clamp (item 7) and disconnect the tube (item 8) from the elbow of the pump inlet.	 
4	WARNING: MAKE SURE YOUR HANDS ARE CLEAN BEFORE YOU CLEAN THE FILTER (3) DO NOT USE COTTON OR CLOTH TO CLEAN THE FILTER COTTON CAN CONTAMINATE THE FILTER.	 
5	Use a regulated air supply to blow through from the inside of the filter (item 3) to remove unwanted material.	 
6	If the filter (item 3) is damaged or cannot be cleaned, discard the filter and install a new one.	 
7	Remove and discard the O-Ring (item 5) from the bolt (item 6) and install a new O-ring (item 5).	 

Appendix – FUEL SYSTEM UNDERWING TANK INSPECTION TRANSFER PUMP FILTERS

NO	TASK	SIGNATURE	
		SIGN	STAMP
8	Put the filter (item 3), new O-ring (item 2) and bowl (item 4) in position and install the bolt (item 6).		
9	Connect the tube (item 8) to the elbow of the pump outlet and tighten the clamp (item 7).		
10	Close the circuit breaker EXT FUEL.		
11	Energizer the aircraft electrical system (Ref. AMM 24-40-00, Page Block 1).		
12	Set the NORMAL-EMERG switch to EMERG and check that the pump operates.		
13	Check the pump for leaks. No leaks are permitted.		
14	Set the NORMAL-EMERG switch to NORMAL.		
15	Remove the electrical power from the aircraft (Ref. AMM 24-40-00, Page Block 1).		
16	Make sure that the work area is clean and clear of tools and other item.		
17	Install the access panel LB7, LB9, RB7 and RB8.		





MAINTENANCE PROGRAM PILATUS PORTER PC6

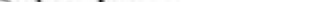
Appendix – FUEL SYSTEM UNDERWING TANK INSPECTION TRANSFER PUMP FILTERS

PERSONNEL PARTICIPATING IN THIS INSPECTION			
NAME	POSITION	SIGNATURE	LICENSE NUMBER
PERRI HERMANIAN	ENGINEER		6445
BRADWELL OBY-T	ENGINEER		5709
KRISTINSON	MECHANIC		

RETURN TO SERVICE

The work recorded above has been carried out in accordance with the requirements of the Civil Aviation Safety Regulation for the time being in force and in that respect the aircraft is considered fit for Release to Service.

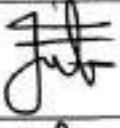
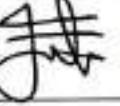
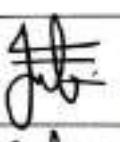
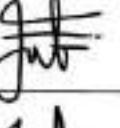
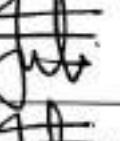
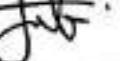
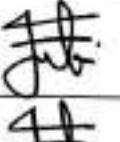
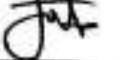
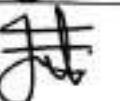
09

Signature :  Place/Date : BERAU / 28-NOV-2021

WHEEL AND BRAKES INSPECTION SHEET OF PILATUS PORTER PC6

Reg. Mark : PK-SNB
 MSN : 1015
 TSN / CSN : 20748 / 309
306 : 46 / 331

Date : 27 - NOV - 2021
 Station : BERAU
 WO No. : WO/004-SNB/XI/2021

NO	TASK	SIGNATURE	
		SIGN	STAMP
1	Perform Detail Visual Inspection with Flash Light, Mirror, and Magnifying Glass of the Brake Pedals and System for Cracks, Corrosion, and Security of Installation.		 09
2	Inspect Wheel and Brakes IAW ATA 32-40-00 and BERINGER Time Limits / Maintenance Checks MC-STC-002.		 09
3	Inspect hydraulic brake fluid reservoir, check brake fluid level, apply brakes, examine system for leaks, and service with MIL-PRF-5606 (ROYCO 756) hydraulic fluid as required.		 09
4	Inspect tire condition IAW ATA 12-14-32 and Michelin Aircraft Tire Care and Service Manual (Michelin Service Manual can be used as a guide line for all approved main tires but will not supersede manufacturer inspection recommendations)		 09
5	Check Brake Disc Thickness Record <u>R: 6.97 L: 6.93</u> mm/inch. Minimum brake disc thickness 0.252 inch / 6.4 mm.		 09
6	Examine brake disc condition for Coning, Groove and Bumps. See figure 2 as attached.		 09
7	Inspect Brake Pad for wear. Brake Pad must be changed before grooves are <u>R: P. 532 mm B. 5.68 mm</u> <u>L: P. 529 mm B. 5.41 mm</u> invisible. See figure 3 as attached. Friction material on Brake Pad minimum thickness 0.100 inch / 2.5 mm. R:		 09
8	Check play between disc and key disc drive. Max play 0.024 inch / 0.6 mm. See figure 3 as attached.		 09
9	Check Main wheels Tire. Examine and check inflation pressure 3,3 bar (49 psi). (20 - PSI).		 09
10	Check Tail wheel. Examine and check for installation and inflation pressure 2,2bar (47 psi).		 09
11	Check and examine brake master cylinders for leaks and connections.		 09



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – MAIN WHEEL INSPECTION

MAIN WHEEL INSPECTION SHEET OF PILATUS PORTER PC6

Reg. Mark : PK-SNB . Date : 27-NOV-2021.
MSN : 1015 Station : BERAU
TSN / CSN : 207-46/309 WO No. : WO/004-SNB/x1/202
306:46/331

NO	TASK	SIGNATURE		
		SIGN	STAMP	
DISSASSEMBLY:				
WARNING: Do not attempt to disassemble wheel until tire has been completely deflated. Otherwise, serious injury to personnel or damage to equipment can result.				
WARNING: Do not attempt to remove valve core until tire has been completely deflated. Valve core will be ejected at high velocities if unscrewed before air pressure has been released.				
1	Remove valve cap and apply a tire deflator to release tire pressure completely.	N/A		
2	Remove wheel from aircraft, be careful not to drop the wheel bearing cones.	N/A		
3	Remove outer wheel bearing cone (inner wheel bearing cone is retained by Lip seal).	N/A		
4	Break the beads away from the wheel flanges by applying pressure by hand or using a wood tool all around the entire sidewall as close to the tire bead as possible.	N/A		
CAUTION: Do not pry between tire bead and wheel flange this may destroy the structural and sealing properties of the wheel and tire.				
5	Remove all screws holding wheel halves together. (All screws must be changed at the same time – Send for Magnetic Particle Inspection).	N/A		
6	Separate wheel halves and remove tire, carefully remove O-rings and lay on a flat clean surface.	N/A		
CAUTION: Do not use impact or power wrenches.				
7	Carefully lay the wheel halves on a flat clean bench.	N/A		
8	If inner bearing cones have to be greased, Lipseal must be removed and replaced	N/A		



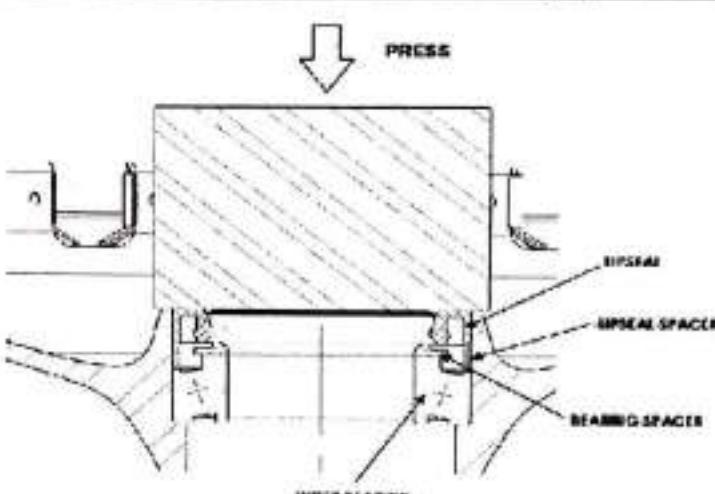
MAINTENANCE PROGRAM

PILATUS PORTER PC6

Appendix – MAIN WHEEL INSPECTION

NO	TASK	SIGNATURE	
		SIGN	STAMP
CLEANING:			
9	Clean all metal parts using soaped water and wipe dry with a clean cloth. Rubber valve must not be cleaned with solvent.	N/A	
CAUTION: Do not use basic or acid agent on wheel halves. Anodizing can be totally removed within few minutes in contact with basic agent. Make sure that cleaning soap is not basic.			
10	Clean wheel bead seat with dry-cleaning solvent and wipe dry with a clean cloth.	N/A	
CAUTION: Oily solvent must not be used on wheel bead seat because tire will not stick properly on the wheel.			
11	Clean O-ring groove with dry-cleaning solvent and wipe dry with a clean cloth.	N/A	
	WARNING: Dry-cleaning solvent are toxic and volatile. Use a well-ventilated room.		
	Avoid contact with skin or clothing. Do not inhale the vapor.		
NOTE: If the seal must be reused clean with soaped water and dry with a soft cloth. Do not use thinner or alcohol for seals cleaning.			
12	Apply air pressure to dry internal thread.	N/A	
CAUTION: Oily solvent or oily air pressure must not be used on internal thread because threadlocker will not properly lock the screws.			
INSPECTION :			
13	a. Perform Visual Inspection of wheel halves for cracks, nicks, corrosion or other damage. b. Causes for replacement of wheel half. 1. Signs of corrosion. 2. Anodizing colour removed from more than 15% of external surface. 3. Heavy nicks. 4. Deformed flanges. 5. Damaged bearing bore.	N/A	
REASSEMBLY :			
	NOTE: It is recommended that O-rings be replaced at each tire change. Rubber valve must be changed if damaged or corroded.		
	CAUTION: A tubeless tire that has been already mounted on another wheel type must not be installed. Tubeless tire will not stick properly on the wheel and may leak.		

Appendix – MAIN WHEEL INSPECTION

NO	TASK	SIGNATURE	
		SIGN	STAMP
	If lip seal has been removed, install inner bearing cone, bearing spacer, Lip seal spacer and press a new Lip seal in the inner wheel half.	N/A	
	NOTE: Lip seal must be replaced at each removal from inner wheel half.		
	CAUTION: Do not forget bearing spacer, it cannot be installed after lip seal.		
	NOTE: Bearing cone cannot be removed without removing lipseal.		
14			
15	Place inner wheel half on a clean bench.	N/A	
16	Clean tire bead seat with a cloth impregnated with dry-cleaning solvent to remove residual grease or wax.	N/A	
	CAUTION: Oily solvent must not be used on tire bead seat because tire will not stick properly on the wheel.		
17	Apply appropriate mounting soap from tire manufacturer on tire bead seat. Tubeless mounting soap in box or in spray (preferred) must be used.	N/A	
18	Install only the correct "tubeless" tire on the inner wheel half.	N/A	
19	Clean o-rings grooves with dry cloth and install small and large o-rings.	N/A	
20	Place the separator disc NOTE: Only when required.	N/A	
21	Place the outer wheel half with the valve positioned at the red balance dot on the tire and align the bolt holes.	N/A	



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – MAIN WHEEL INSPECTION

NO	TASK	SIGNATURE	
		SIGN	STAMP
NOTE: Assembly screw must be replaced at each tire change.			
22	Put a drop of thread locker medium strength (Loctite 243 recommended) oneach end of assembly screw.	N/A	
22	CAUTION: Using a wrong thread locker or not from recommended type may cause loose of screws or removal problem.		
23	Install all screws to contact.	N/A	
23	CAUTION: Do not use impact or power wrenches.		
24	Torque all screws to 12 N.m (105 in-lb).	N/A	
25	Torque all screws a second time to 12 N.m (105 in-lb).	N/A	
26	Inflate tire just enough to seat beads.	N/A	
26	WARNING: Place wheel in an inflation cage for initial inflation. do not inflate tire to full operating pressure until wheel has been installed on aircraft. tire and / or wheel failure may occur causing injury to personnel or damage to equipment if the tire is inflated from any high-pressure source. tire and wheel assemblies must be serviced with inflation equipment that has been specifically designed for this operation.		
27	Check bearing cups and cones	N/A	
28	Pack bearing cones with clean bearing grease to specification MIL-G-81322 and coat bearing cups with a light coat of grease.	N/A	
29	Install outer bearing cone in wheel and install on aircraft helping disc to take place in wheel slots.	N/A	
30	Adjust bearings to aircraft manufacturer's recommendations and safety.	N/A	
31	Install o-ring on wheel cap and screw the cap.	N/A	
32	Torque the cap to contact with hand force using BERINGER tool AV-PIL-101.	N/A	
CAUTION: Excessive torque on the cap may cause problem to unscrew.			



MAINTENANCE PROGRAM PILATUS PORTER PC6

Appendix – MAIN WHEEL INSPECTION

NO	TASK	SIGNATURE	
		SIGN	STAMP
33	Install disc safety wire diameter 1.01 mm (0.040") from stainless steel grade 302 in wheel ring groove.	N/A	
	CAUTION: Disc safety wire must be in place it prevents disc from sliding out the slots.		
34	Inflate tires to operating pressure and install valve caps.	N/A	
	Check inflation pressure after 24 hours.	N/A	
35	CAUTION: After 24 hours, inflate pressure should not be less than 90%. if so, check for a leakage at valve, o-ring or bead seat. NOTE: The installation of the small wheel 24x7.7 is identical to the standard wheel		

PERSONNEL PARTICIPATING IN THIS INSPECTION			
NAME	POSITION	SIGNATURE	LICENSE NUMBER

RETURN TO SERVICE

The work recorded above has been carried out in accordance with the requirements of the Civil Aviation Safety Regulation for the time being in force and in that respect the aircraft is consider fit for Release to Service.

Name : N/A Stamp : N/A
Signature : N/A Place/Date : N/A



NON ROUTINE CARD

(Form: SCA/MTC/047)

1. JO/WO #	2. DATE	3. MTC TYPE	4. A/C REG/MSN
WG/004-SNB/XI/2021	15/Nov/21	INSPECTION	PK-SNB/1015
5. CARD #	6. ATA SPEC	7. TRADE	8. STA
001	56	AIRFRAME	BERAU
9. ZONE	10. PANEL	-	

11. DESCRIPTION

PERFORM EMERGENCY WINDOWS - LUBRICATION

REFERENCE	<input checked="" type="checkbox"/> AMM Ch. 56-10-01	<input type="checkbox"/>	<input type="checkbox"/> OTHER
RII (*)	<input type="checkbox"/> Y	<input checked="" type="checkbox"/> N	MHR:

12. RESULT

PERFORMED EMERGENCY WINDOWS LUBRICATION,
FOUND HINGE EMERGENCY WINDOWS STILL WORKING
GOOD AND SATISFY.
REF. AMM. 5G-10-01.

306:46
307-46
Performed at A/C TT: 307-46 A/C TC/LDG: 309-331

FINDING	<input type="checkbox"/> Y	<input checked="" type="checkbox"/> N	ACT MHR:	DATE/TIME (DD/MM/YY)		
INSPECTION CARD (IC) #				29.	NOV	2021

13. PARTS REQUIRED

14. TOOLS REQUIRED

DESCRIPTION	PART NO / MODEL	NEXT CALIBRATION DATE	STATUS
OIL PAN	NPN	0/C	OK



**EMERGENCY EQUIPMENT
LIST
INSPECTION & MONITOR**

**PT. SMART CAKRAWALA
AVIATION
DEPARTMENT TEKNIK
Form: SCA/MTC/023**

DATE : 29 NOV 2021

A/C REG : PK-SNB

A/C TYPE : PC 6 - PILATUS

CHECKER : FEBRI. H

SIGN:



No.	Description	P/N	S/N	Next Insp.	Remarks
1	Pilot Life Vest	P01074-101	17071100038	JULY-2022	GOOD
2	Co-Pilot Life Vest	P01074-101	12062000066	JULY-2022	GOOD
3	Pax Life Vest	63600-167	L634366	JUNE-2022	GOOD
4	Pax Life Vest	P0723-105P	L602240	AUG-2022	GOOD
5	Pax Life Vest	42235001	6097-004	AUG-2022	GOOD
6	Pax Life Vest	S41150-6400	11391-1640	AUG-2022	GOOD
7	Pax Life Vest	P0723-105P	L635755	AUG-2022	GOOD
8	Pax Life Vest	S5T850-6301	44961-1670	AUG-2022	GOOD
9	Pax Life Vest	L33600-167	L671565	AUG-2022	GOOD
10	Pax Life Vest				
11	Pax Life Vest				
12	Pax Life Vest				
13	First Aid Kit				
14	Crash Axe Installed	NPN	NSN	O/C	GOOD.
15	Fire Extinguisher	BA510152-5	118469	AUG-2022	SERVICEABLE
16	Life Raft (If Installed)	REVERE	CC60-414	JUNE-2023	SERVICEABLE
17	Survival Kit (If Installed)				
OTHERS					
18	FLASH LIGHT.	NPN	NSN.	O/C	GOOD.



Additional Work Sheet 100 Hours / Annual Inspection

Aircraft Registration: **PK-SNB**
WO# Nr.: **WO/004-SNB/XI/2021**

Parts Used Sheet

Date	Part Nr.	Serial Nr.	Part Used	Description	Quantity	Engineer
29 NOV 2021	CH34055	-	16VITER	1 EA	BRANDON	
29 NOV 2021	2380	-	ENGINE OIL	1 CAN	BRANDON	
29 NOV 2021	AN 623C - 2A	-	FLUKE ELEMENT	1 EA	BOY	
29 NOV 2021	MS 2501884-928	-	PACKING	1 EA	BOY	
29 NOV 2021	M 83485 - 1-212	-	ONCULING	1 EA	BOY	
29 NOV 2021	AS 3209 - 120	-	PACKING	1 EA	BOY	
29 NOV 2021	AS 3209 - 143	-	PACUNO	1 EA	BOY	
29 NOV 2021	AS 3209 - 224	-	PACUNO	1 EA	BOY	
29 NOV 2021	AS 3209 - 126	-	PACUNO	1 EA	BOY	
29 NOV 2021	AS 3209 - 015	-	PACUNO	1 EA	BOY	
29 NOV 2021	AS 3209 - 115	-	PACUNO	1 EA	BOY	
29 - NOV 2021		-	ROTTER OIL	5 EA	BOY	



Aircraft Registration: PK-SNB

WO# NC. WO/004-SNB/XI/2021



**Additional Work Sheet
100 Hours / Annual Inspection**

Parts Used Sheet

No.	Description	Part - Number -	Due Date	Engineer
1	PRESSURE GAUGE	0908 / 2105	AUG - 2023	FERGI H
2.	VECTRUE CALIPER	1108 - 150	AUG - 2023	FERGI H
3	OUTRIGGERS MICROWHEEL	BR.5014MPC - 1"PX	AUG - 2023	FERGI H
4	TORQUE WRENCH	BR.5014MPC	JAN - 2023	FERGI H
5	TORQUE WRENCH	96212	AUG - 2023	FERGI H
6	FLUKE GAUGE	24. BLADE	9/0	FERGI H
7.	BERNIEER TOOLS - CAP	AN - 911 - 101(A)	0/0	FERGI H
8 -	TORQUE WRENCH	10268841	SEPT - 2023	FERGI H



INSPECTION CARD

(Form: SCA/MTC/048)

TECHNICAL
DEPARTMENT

1. CARD #	2. JOWO #	3. ORIGINATOR	4. CARD REF	5. DATE
1C-001	W0/004-SNB/0/2021	-	APPENDIX - 100. HRS	29 - NOV - 2021.
6. A/C REG/MSN	7. A/C TYPE	8. TRADE	12. VENDOR ORDER #	
PK-SNB	PCG -T.	ENGINE		
9. ZONE	10. STA	11. MTC TYPE		
-	BERAU	PART REPLACEMENT.		

13. DESCRIPTION/DEFECT-IF FINDING OF CPCP INSPECTION, PLEASE COMPLETE SET. 20	14 PPC/ENG	15 DATE
IGNITER FOUND EROSION OUT OF LIMITS 2 EA.	FEBR. 11 JLB	29/2021 NOV

16. CORRECTIVE ACTION	17 MECH	18 ENG. LIC	19 DATE
PERFORMED REPLACED IGNITER WITH THE NEWONE 2 EA, DO OPERATIONAL CHECK IGNITION SYSTEM WORKING GOOD AND SATISFY. REF. 74-20-02. Performed at A/C TT: 306:46 A/C TC/LDG: 309-331			29/2021 NOV JLB 09
20. CORROSION INFORMATION			
LOCATION	CAUSE OF DAMAGE		
CORROSION	<input type="checkbox"/> Isolated <input type="checkbox"/> Widespread	<input type="checkbox"/> Environment	
CORROSION LVL	<input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3	<input type="checkbox"/> Internal Leakage	
PROPOSED ACTION	<input type="checkbox"/> Doublers <input type="checkbox"/> Others	<input type="checkbox"/> Chemical Spill <input type="checkbox"/> LAV/Galley Spill <input type="checkbox"/> Blocked Drain <input type="checkbox"/> Wet Insulation Blanket <input type="checkbox"/> Other	
21. If the defect is RII, Please Sign this card finally by RII Inspector	INSP	DATE	
NOTICE OF INSPECTOR			

22. PARTS REQUIRED						
PART DESCRIPTION	PART NO	QTY	SERIAL NO		STATUS	
			ON	OFF	CLOSE	OPEN
IGNITER	CH34055	2-EA	NSN	NSN	✓	
GASKET	3010880	1-EA	NSN	NSN	✓	
23. TOOLS REQUIRED						
DESCRIPTION	PART NO. / MODEL	NEXT CALIBRATION DATE		STATUS		
TORQUE WRENCH	10268841	SEPT. 2023		OK.		